

## Important

- a) Check that consignment is received in good order.  
No claims for damages, breakages or shortages can be considered unless marked on Haulier's copy or delivery note and a written claim made within 3 days to the address below.
- b) Store rooflights on edge, under cover, in a dry place.  
Separating pieces should be inserted between each rooflight.  
Rooflights must NOT be stacked on top of each other.

## Coxdome Galaxy Fitting Instructions

Coxdome Rooflights are supplied undrilled, in order to facilitate on site, positioning of the fixings to suit your kerb.

## To drill the Dome

Using the centres shown in the chart as a guide –  
Drill a 6mm pilot hole through all the rooflight skins.  
Drill a 14mm dia. hole through all of the rooflight skins.

## To install the fixing

Pass the Under Cap up through the drilled hole.  
Screw the Upper Cap on to the Under Cap.  
Tighten the Under Cap using a 6mm Allen Key.

## To drill the Kerb where necessary

*(i.e. if either concrete or metal).*

Position and align the dome on top of the kerb.

At each fixing position spot drill the kerb using a 6mm dia. drill.

Remove the dome and drill fixing holes as required.

## To fix the dome to the kerb


Adhere the weather strip (supplied loose) to the inner glazing.  
Ensure that the seal runs inboard of the fixings.


**DO NOT** stretch the weather seal.

**DO NOT** take round corners but cut and overlap at corners.

Reposition the Dome on top of the kerb and secure in position using the screws supplied.

Press on the Anti-burglar Cover and Cover Cap.

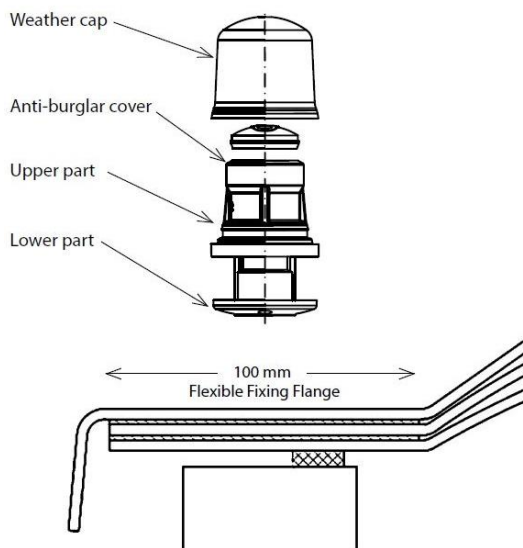

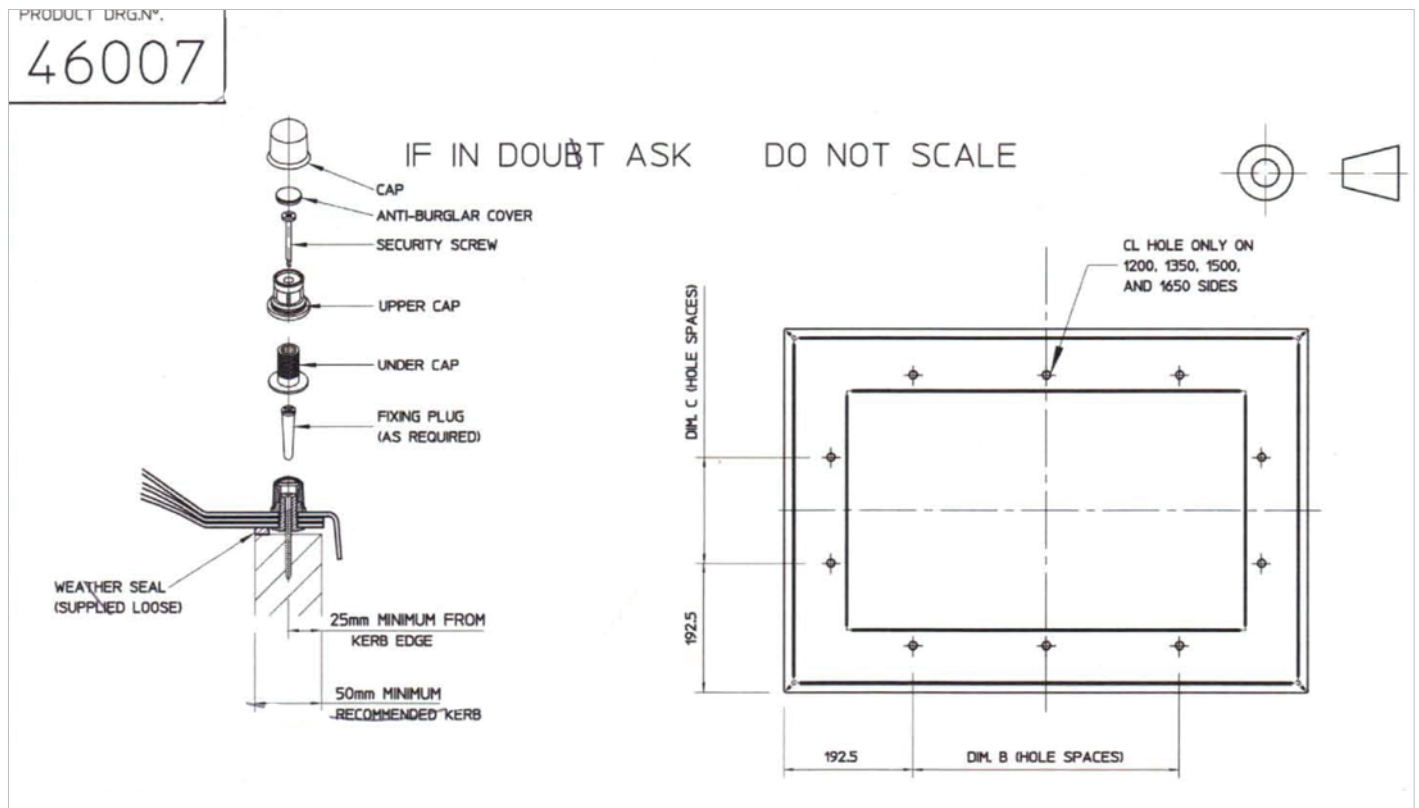

## Coxdome Galaxy Fitting Instructions

Coxdome Rooflights are supplied undrilled, in order to facilitate on site, positioning of the fixings to suit your kerb.

### To drill the Dome

Using the centres shown in the chart as a guide –  
 Drill a 6mm pilot hole through all the rooflight skins.  
 Drill a 14mm dia. hole through all of the rooflight skins.

### To install the fixing

Pass the Under Cap up through the drilled hole.  
 Screw the Upper Cap on to the Under Cap.  
 Tighten the Under Cap using a 6mm Allen Key.

### To drill the Kerb where necessary

*(i.e. if either concrete or metal).*

Position and align the dome on top of the kerb.  
 At each fixing position spot drill the kerb using a 6mm dia. drill.

Remove the dome and drill fixing holes as required.

### To fix the dome to the kerb

Adhere the weather strip (supplied loose) to the inner glazing.  
 Ensure that the seal runs inboard of the fixings.

**DO NOT** stretch the weather seal.

**DO NOT** take round corners but cut and overlap at corners.

Reposition the Dome on top of the kerb and secure in position using the screws supplied.

Press on the Anti-burglar Cover and Cover Cap.

No. OF HOLES	DIM C HOLE CTRS	DIM B HOLE CTRS	ROOFLIGHT SIZE MM
16	2 x 432	4 x 521	1200 x 2400
14	2 x 432	3 x 492	1200 x 1800
12	2 x 432	2 x 582	1200 x 1500
12	2 x 357	2 x 582	1050 x 1500
12	1 x 555	3 x 492	900 x 1500
10	1 x 555	2 x 432	900 x 1800
8	1 x 705	1 x 555	750 x 900
12	1 x 255	3 x 492	600 x 1800
10	1 x 255	2 x 582	600 x 1500
10	1 x 255	2 x 432	600 x 1200
8	1 x 255	1 x 555	600 x 900
16	3 x 492	3 x 492	1800 x 1800
12	2 x 582	2 x 582	1500 x 1500
12	2 x 432	2 x 432	1200 x 1200
12	2 x 357	2 x 357	1050 x 1050
8	1 x 555	1 x 555	900 x 900
8	1 x 405	1 x 405	750 x 750
8	1 x 255	1 x 255	600 x 600

#### Important notes:

The responsibility for determining that any building component complies with the relevant Building Regulations rest solely with the client or specifier.

Information in this publication and otherwise supplied to users, is based on our general experience, best knowledge and belief. Due to factors which are outside our knowledge and control and which can affect the use of products, no warranty is given or implied with respect to such information.

The Company's policy is one of continuous product improvement; accordingly Cox Building Products Ltd, reserve the right to alter specifications without notice at any time.