

# Mardome Glass Link Installation Instructions Opening Modules

**TB299B**

Mardome  
Glass Link  
230V actuators

Installation Instructions

Jan 2020

## FOR OPENING UNITS

Cable will exit through the bottom of the frame.


Ensure upstand is prepared before installation begins.

Refer to approval drawing for cable positioning detail.

If approval drawings do not specify cable exit point, please contact BMDs.

## TYPE 2 - 230V HCVA

### Wall Switch

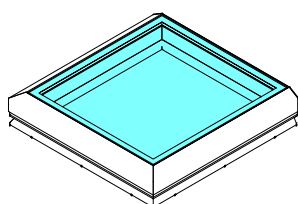

CABLE FROM  
ROOFLIGHT

 
OPUS IP20 COMFORT  
SWITCH (SUPPLIED)

BLACK (OPEN)

BROWN (CLOSE)

GREY (NEUTRAL)

YELLOW/GREEN (EARTH)



PHASE

NEUTRAL

EARTH

To 230V Supply,  
3A Fused Spur  
(by suitably qualified  
electrician)



Daylight Systems

The manufacturer operates a policy of continuous product improvement, and reserves the right to alter specifications at any time without notice. Every effort has been taken to ensure all details contained in this document are correct at time of going to press, but this document should be used only as a guide and does not in any way form part of a contract or warranty. It is the customer's responsibility to ensure that the product is suitable for the actual conditions of use, which are beyond the control of the manufacturer.